



www.axis.com

Controller MAC Address: 00:40:8C:EC:B5:8C

Controller IP Address: 192.168.0.90

For information about how to connect power for readers and locks, see the manufacturers' instructions

